



Reference Document: N/A
Date of Issue: 07/01/2020
Applicable Equipment: Micro-5
Applicable Part/Kit#: N/A

Troubleshooting

Problem	Cause	Remedy
RED BRUSH LED QUICK FLASHING	Brush motor overcurrent/short circuit.	Press the button to remove the error.
RED BRUSH LED DOUBLE QUICK FLASHING	Overcurrent/short circuit solution pump H20.	Press the button to remove the error.
RED VACUUM MOTOR LED	Vacuum motor overcurrent/short circuit.	Press the button to remove the error.
RED VACUUM MOTOR LED + RED BRUSH MOTOR LED	Generic overcurrent/generic short circuit.	Press the button to remove the error.
ALL BATTERY LEDS FLASH IN SEQUENCE	Battery charging in progress.	Remove the charging connector from the battery.
ALL BATTERY LEDS FLASH SIMULTANEOUSLY	No communication between power board and touch board.	Check the connection cable between the panel and power board. Change the power board.
BATTERY GREEN LED FLASHING	Charge > 100%.	Wait a few seconds to have the voltage stabilized.
GREEN BATTERY LED ON	Charge > 42% to 100%.	
YELLOW BATTERY LED ON	Charge > 17% to 42%.	
RED BATTERY LED ON	Charge > 8% to 17%.	
RED BATTERY LED FLASHING	Charge < 8.	Recharge the battery.